

CLASSIC PlayCASTLE

Tips for Safe & Joyful Play

Welcome to a world of adventures. Your child's safety always comes first and by following these simple guidelines, you can create a joyful, safe play space.

- Before starting, refer to the "Location Selection Guide" to choose the perfect spot to install your Classic PlayCASTLE. Make sure product is placed on a level surface to guarantee safety, proper function and durability.
- Classic PlayCASTLE is designed for an adult-only assembly to ensure every piece is fitted with precision. Keep all the parts out of the reach of children until the product is fully assembled.
- To protect the parts from scratches, assemble the product on a non-abrasive surface.
- Packaging materials are not safe to play with and should be kept away from children.
- Before each play session, take a few minutes to confirm that all the fasteners are firmly tightened and all the parts are securely fastened. Make sure the play area is free of sharp objects, debris or other potential hazards that may cause injuries.
- Teach your child to sit upright and go down feet-first on the slide. Climbing up the side, sliding down headfirst or in the standing position can be fatal and should be avoided at all costs. Additionally, parents should discourage their children from jumping off the slide seat.
- Do not attach any external ropes, chains, or accessories not supplied with the Classic PlayCASTLE, as these may interfere with the normal functioning of the product.
- Only one child on the slide is recommended at a time. Children should wait until the landing area is completely clear before going down the slide.
- The product is intended for use by kids over 2 years of age and has a play capacity of up to 6 children at a time. Never exceed the user limit.
- While assembling the Classic PlayCASTLE, do not overtighten the bolts as this may cause damage to the parts.
- Adult supervision is recommended at all times to promote safe play and provide immediate assistance (when required).
- Regularly wipe the product with a plain, dry cloth regularly and avoid using harsh chemicals. For detailed care instructions, refer to the "Operation and Maintenance Guide" provided with the product.



Part Details



Small Castle Side Panel x 2



Small Platform x 1




Stair x 1



T-Handle x 1



Slide x 1

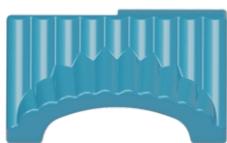

Small Castle Roof x 2

List of Parts	No.
Small Castle Side Panel	2
Stair	1
Small Platform	1
Slide	1
Small Castle Roof	2
Allen Key	1
T Handle	1
Swing Leg	2
Swing Leg Support	1
Big End Plate	1
Small End Plate	1
Swing Bar	1
Bucket Swing	1
Flap Swing	1

Washer	28
Nut Cap Base	31 (7 Spare)
Nut Cap	31 (7 Spare)
Nut	8
Allen Bolt (30mm)	2
Allen Bolt (40mm)	4
Allen Bolt (50mm)	2
Allen Bolt (60mm)	4
Allen Bolt (70mm)	4
Allen Bolt (110mm)	2
Allen Bolt (150mm)	2
Instruction Manual	1
Anchor Fastener	6

Assembly requires a minimum of 2 people. Have a third person assist when necessary.

Model No: CLPC

2+ YEARS



Customer Support



Assembly Video

Before starting the assembly, please ensure that the part quantity matches the numbers listed in the manual. If you find any discrepancies in the part count or encounter any product-related issues, feel free to reach out to us at +918221001033 or connect with us via WhatsApp in between 9:30-6PM, Monday to Saturday. We're here to assist you!

DISCLAIMER: Actual product color may vary slightly from what is shown in the image.



Nut Base x 31
(7 Spare)



Nut Cap x 31
(7 Spare)



Nut x 8



Allen Bolt (30mm) x
2



Allen Bolt (40mm) x
4



Swing leg x 2



Washer x 28



Allen Bolt (50mm)
x 2



Allen Bolt (60mm)
x 4



Allen Key x 1



Allen Bolt (70mm)
x 4



Allen Bolt (110mm)
x 2



Allen Bolt (150mm)
x 2



Instruction Manual
x 1



Swing Leg Support
x 1



Swing Bar x 1



Bucket Swing x 1



Flap Swing x 1



Big End Plate x 1



Small End Plate x 1



Anchor Fastener x 6



WARNING



Anchoring the PlayCASTLE (Mandatory)

For enhanced stability and safety, OK Play recommends anchoring the Play Castle to the floor. PlayCASTLE may also be used without anchoring but securing it to the floor will minimize movement during play.


To secure the PlayCASTLE to the floor:

1. Drill holes in the floor at the positions where the play castle is to be anchored.
2. Position the play set at the desired location, aligning pre-drilled holes on the base of both side panels with the drilled holes.
3. Insert an anchor fastener (provided in the packaging) through each of the two holes on both small castle side panels, making sure each anchor fastener passes directly into the corresponding drilled hole on the floor.
4. Tighten the anchor fasteners firmly to secure the side panels to the floor.

Repeat the above mentioned steps to anchor the swing legs to the floor, using one anchor fastener for each swing leg. Once completed, the play set will be anchored securely, minimizing movement during use.

Bolt Size Identification


To identify the bolt size, place it on the printed image and match the length of the bolt threaded shaft with the illustration.

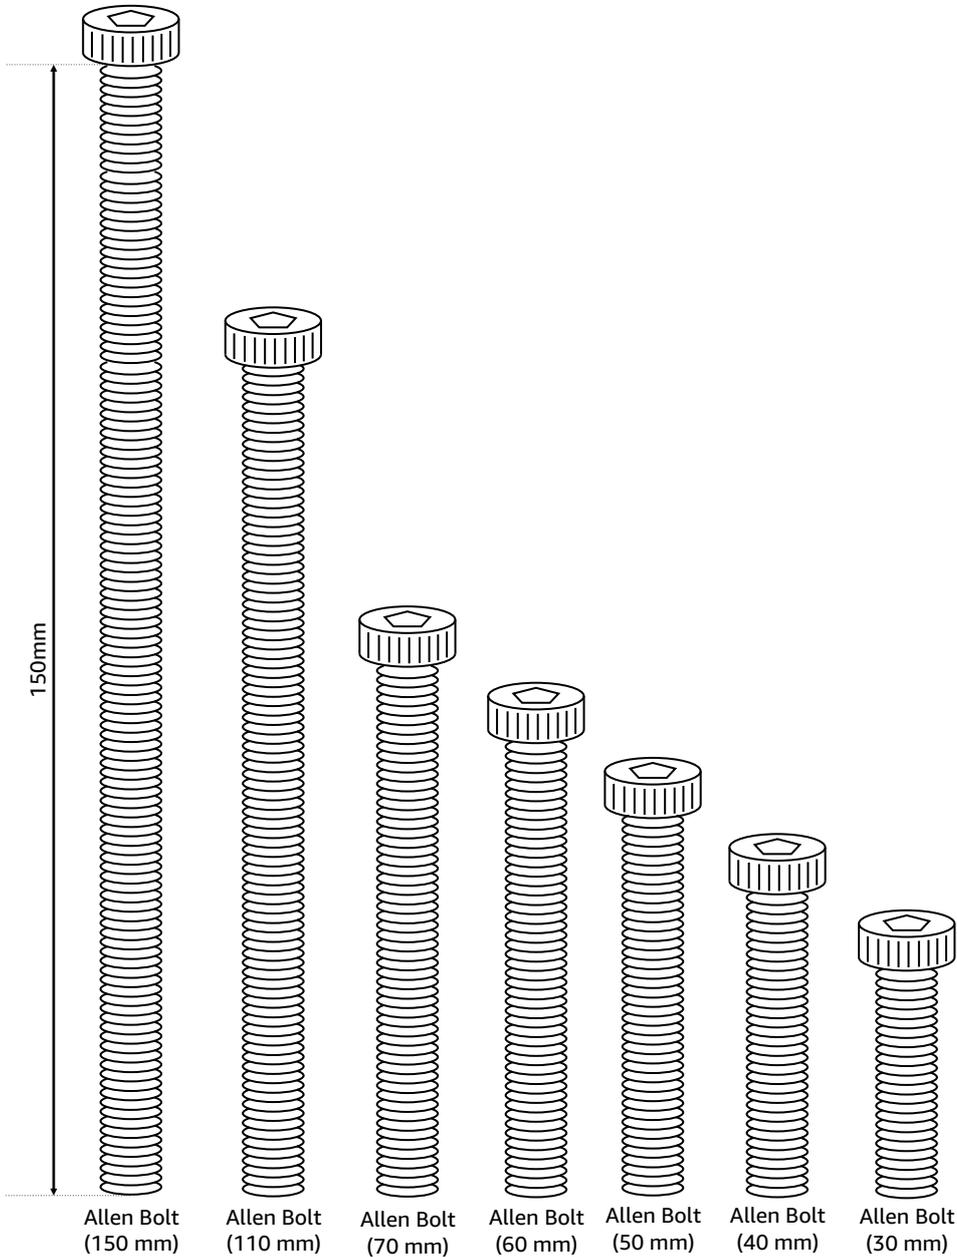

1 STEP

Assembly Instructions

Required Assembly Parts

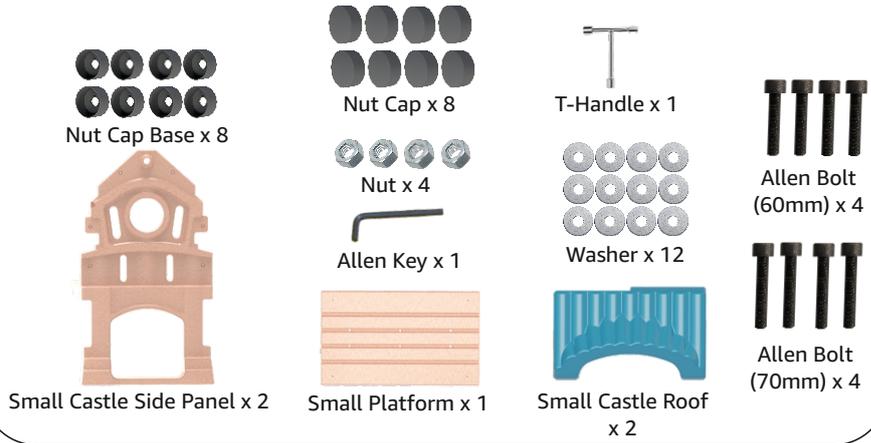


Assemble the PlayCASTLE on a soft, non-abrasive surface to protect it from scratches.




Place the two small castle side panels upright on a flat, stable surface, making sure they are parallel to each other and at an appropriate distance apart.

Position the small platform between the side panels making sure the grooves on the underside of the small platform align with the tabs on the inner side of the side panels. Carefully move the platform downward so it fits securely between the small castle side panels.

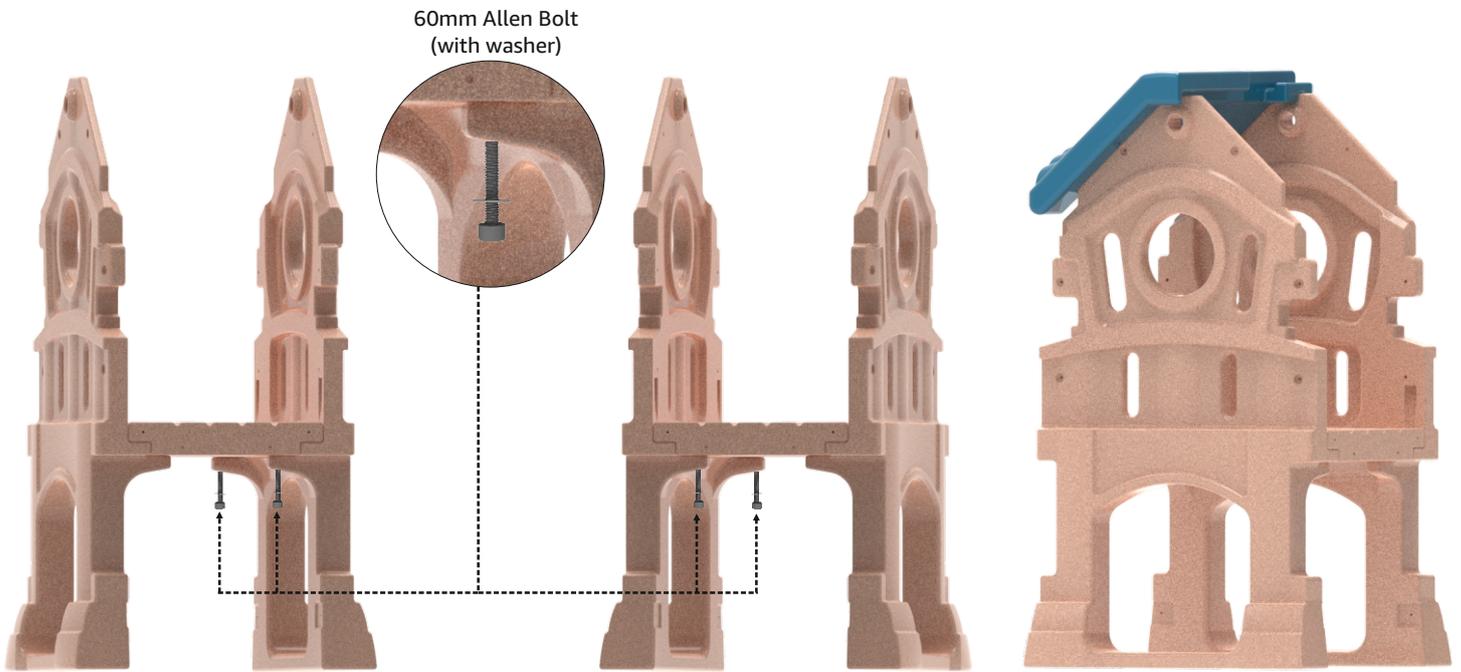

- A. Take four 60 mm allen bolts and put a washer onto each.
 - B. From underneath the subassembly, insert one 60mm allen bolt (with washer) into each of the four aligned hole pairs of the small castle side panels and the small platform.
- Tighten all the allen bolts one by one with the allen key.**

Place one small roof on top of the assembled small panels as shown in the image above.

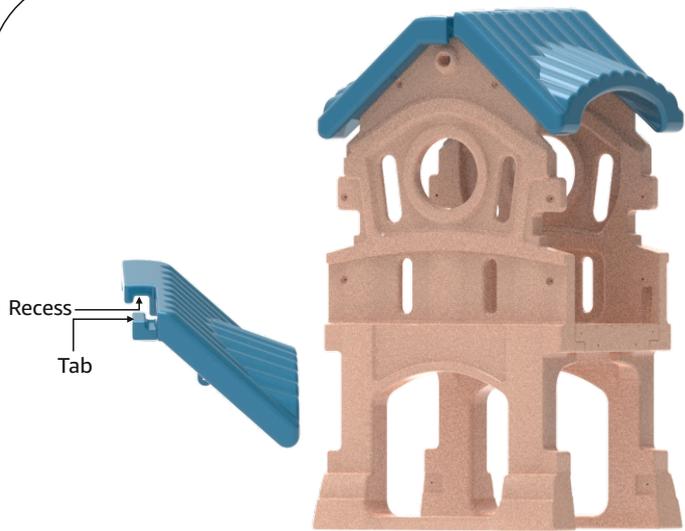


Take the other small roof and place it on top of the side panels, making sure the top edges of both small roofs are aligned.



Interlock the two small roofs together by inserting the tab of one small roof into the corresponding recess of the other. Adjust the roofs, if needed, so they fit properly.


Note: Make sure the top edges of the small castle side panels fit into the grooves on the underside of the assembled roof panel.

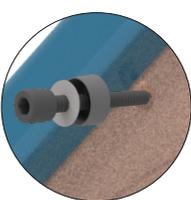


Allen bolt (70mm) with a washer and a nut cap




Nut Cap Base and Washer

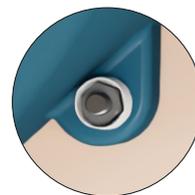

Nut

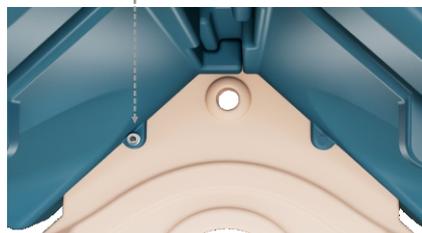


From inside the subassembly, place a nut cap base and a washer onto the allen bolt (inserted in the previous step) from the bolt end.

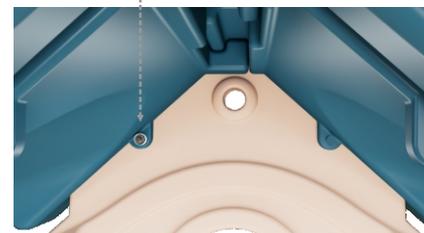


Take a nut and put it onto the allen bolt from the bolt end.

Put a washer first and then a nut cap base onto a 70mm allen bolt and insert the bolt (with the washer and the nut cap base in place) through the aligned holes of the roof panel and the side panel. The threaded end of the allen bolt protrudes from the other side

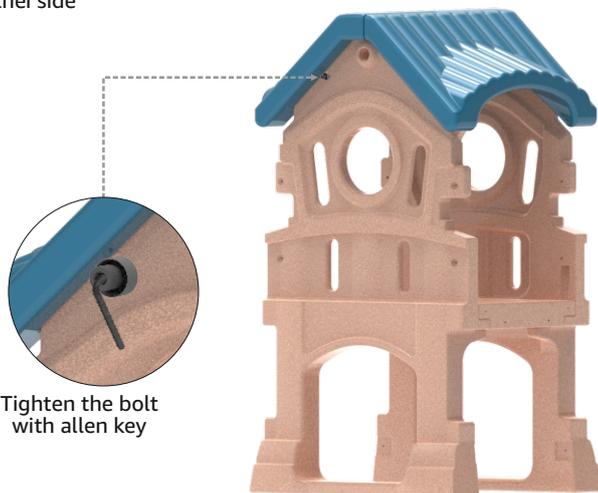


Tighten the bolt with allen key

From outside the subassembly, tighten the allen bolt with the allen key provided in the packaging. Use the T-handle to hold the nut stationary while tightening the allen bolt.

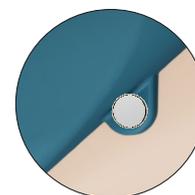


Nut Cap

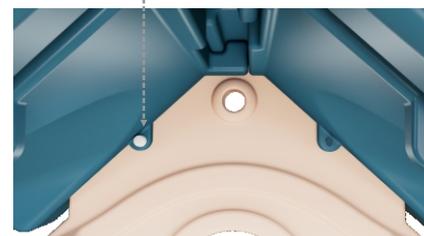

Place the nut cap onto the bolt end and press it firmly until it fits securely in place.


From outside the subassembly, fit a nut cap onto the bolt head.

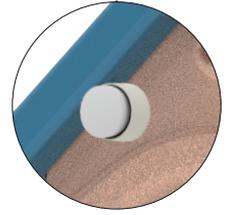

Nut Cap



Repeat the above steps to insert one 70 mm allen bolts, fitted with a washer, through each of the remaining three aligned holes of the small castle side panel and the roof. For each allen bolt, use two nut cap bases, two washers, a nut and then tighten the bolt with the allen key as mentioned in the sequence of actions in this step. **Once tightened, put a nut cap onto the head and the end of each bolt.**

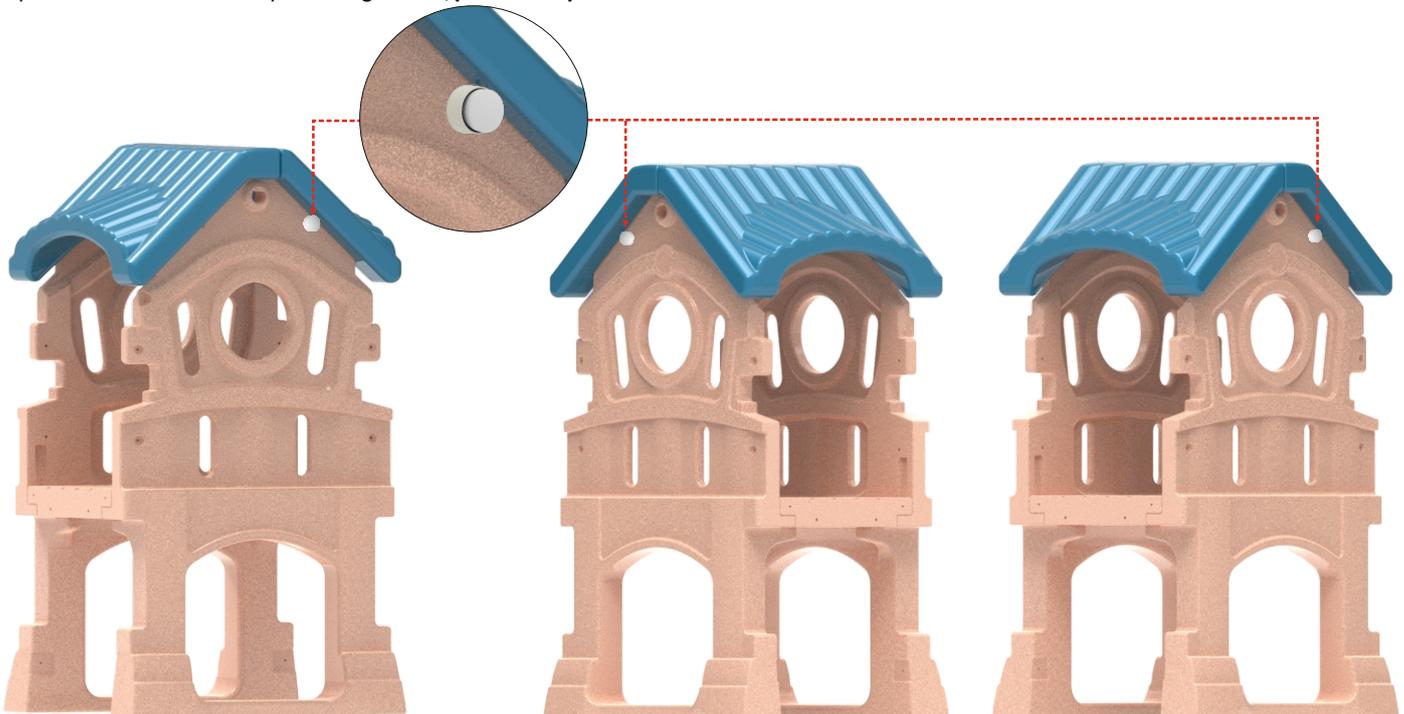

2 STEP

Required Assembly Parts



Subassembly (Step 7)



Slide x 1



Washer x 4



Allen Bolt (40mm) x 4




Allen Key x 1



Nut Cap Base x 4




Nut Cap x 4

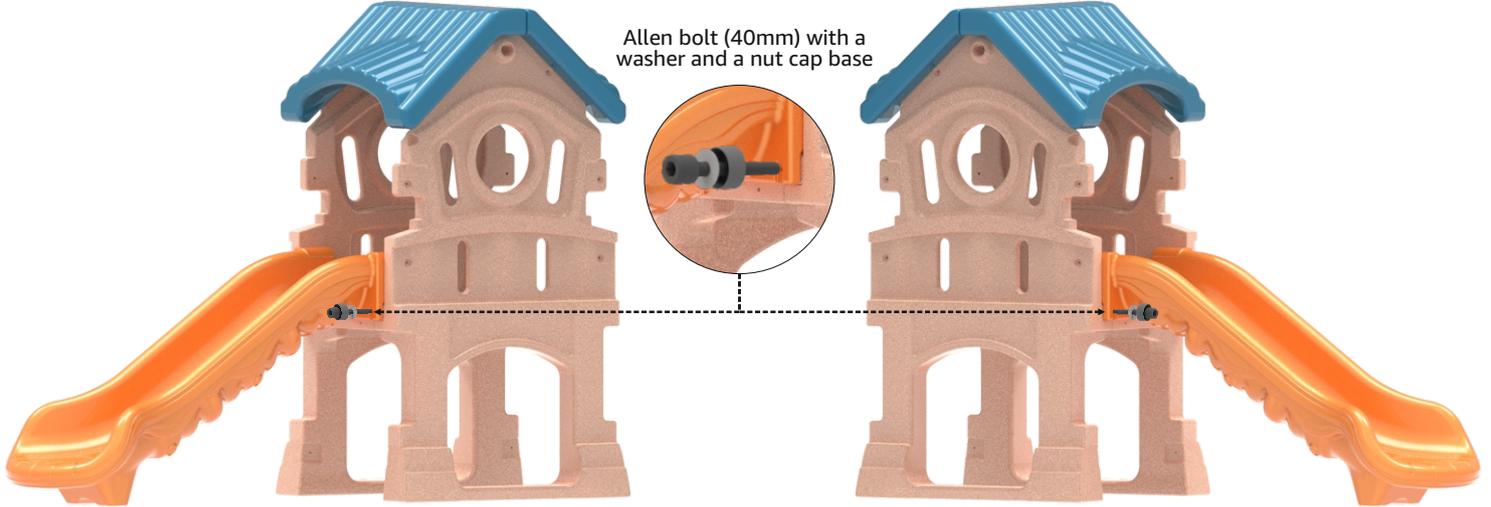


Allen bolt (40mm) with a washer and a nut cap base


Take the slide and fasten it to the subassembly (step 7) by tightening the four allen bolts (40mm), each with a washer and a nut cap base, with the allen key. Put a nut cap each onto the head of all the allen bolts.

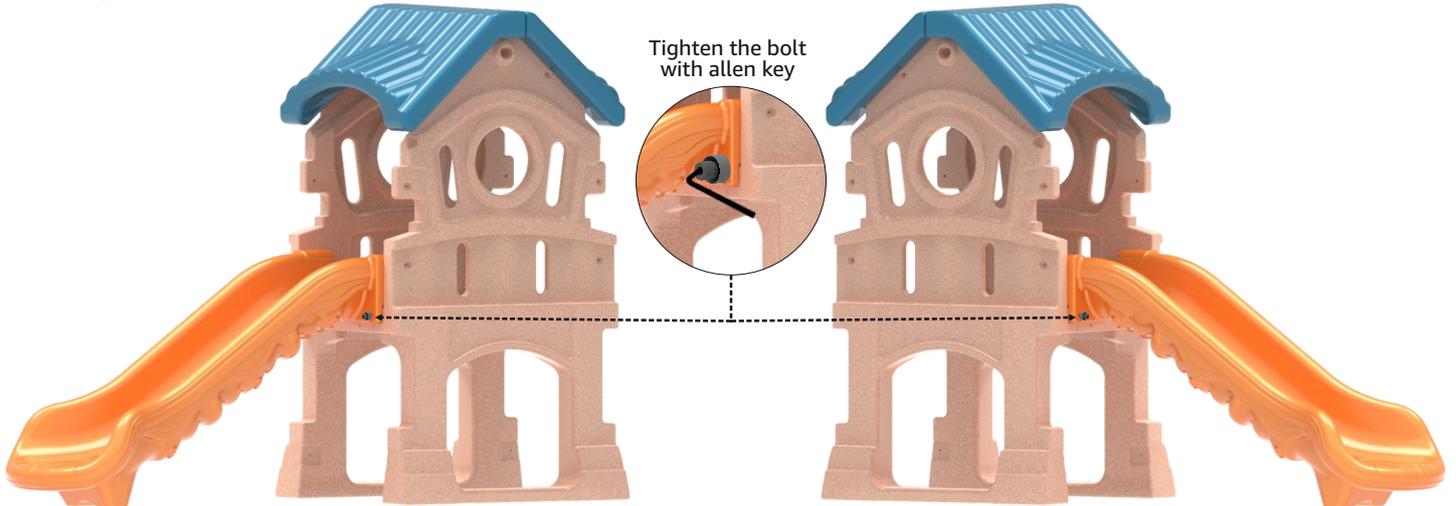



Tighten the bolt with allen key

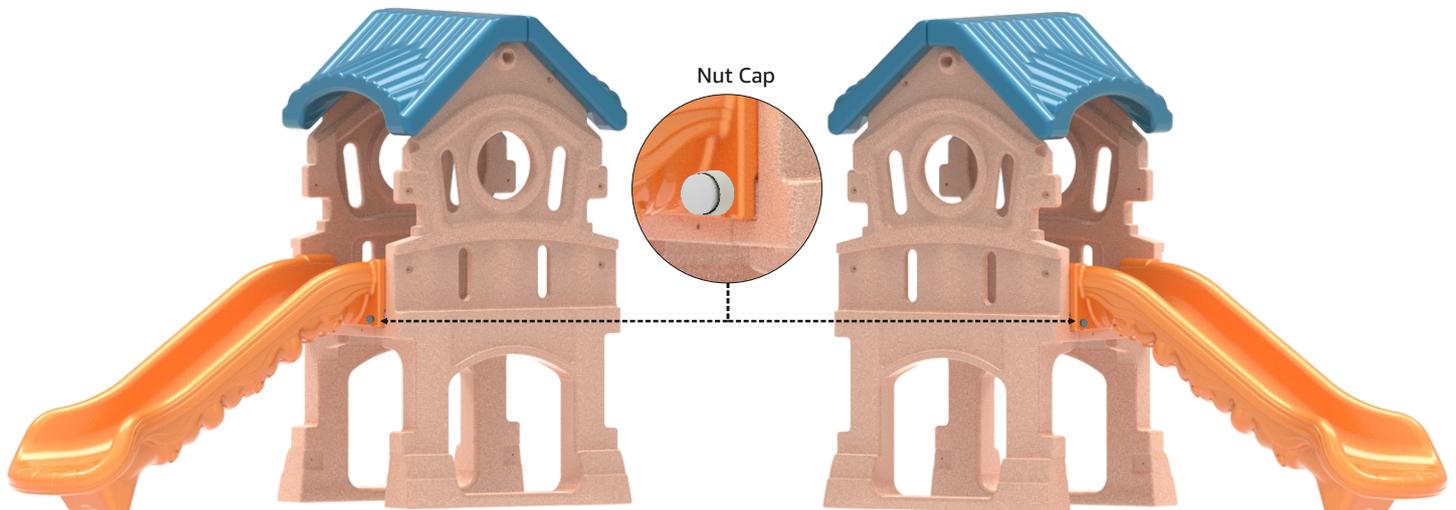

Nut Cap

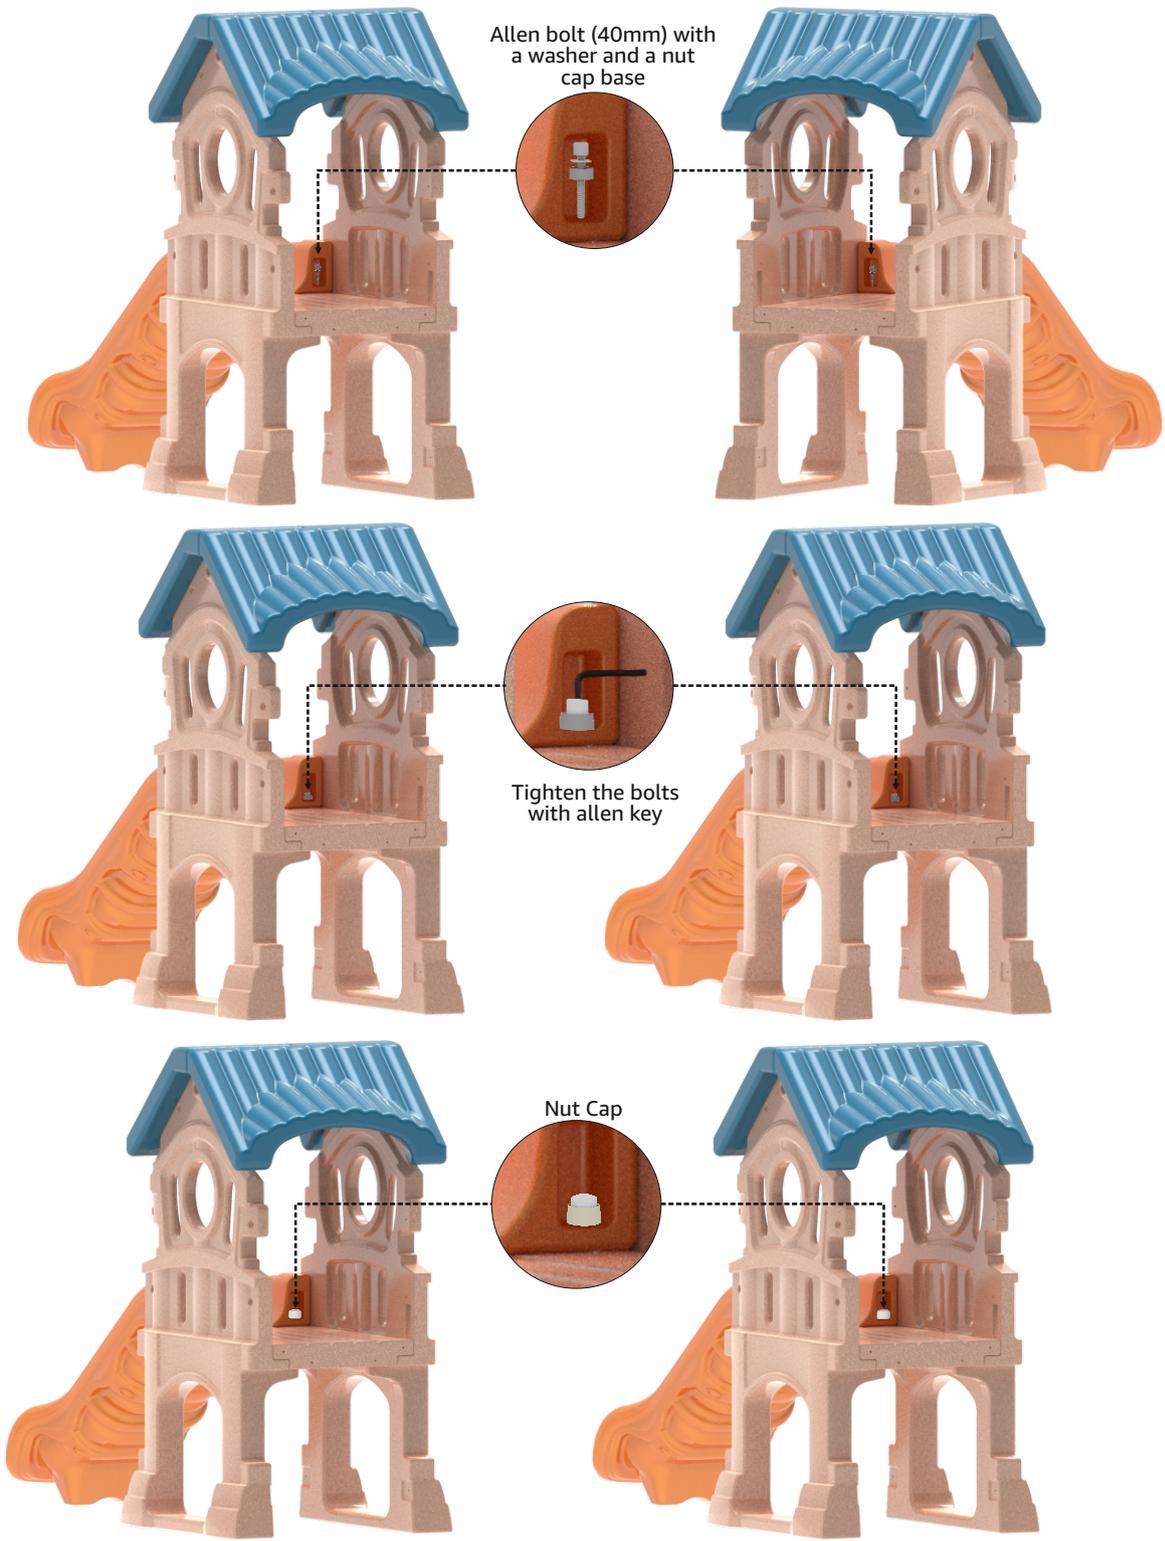


Allen bolt (40mm) with a washer and a nut cap base

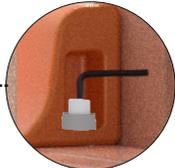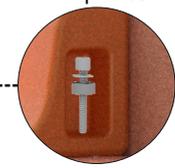

Tighten the bolts with allen key

Nut Cap

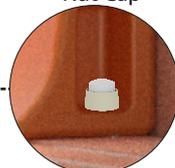

3
STEP

Required Assembly Parts



Subassembly (Step 2)

Stair x 1



Washer x 2



Allen Key x 1



Allen Bolt (50mm) x 2




Nut Cap x 2



Nut Cap Base x 2




Allen Bolt (50mm) with a washer and a nut cap base

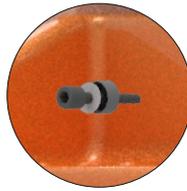

Take the stair panel and place it at the position as shown in the image above. Make sure the holes at the top of the stair are aligned with the corresponding holes on the platform.


Put a washer and a nut cap base each onto the two allen bolts (50mm). Insert one bolt (with a washer and a nut cap base) into each of the two pairs of the aligned holes.

Tighten both the allen bolts one by one with the allen key.

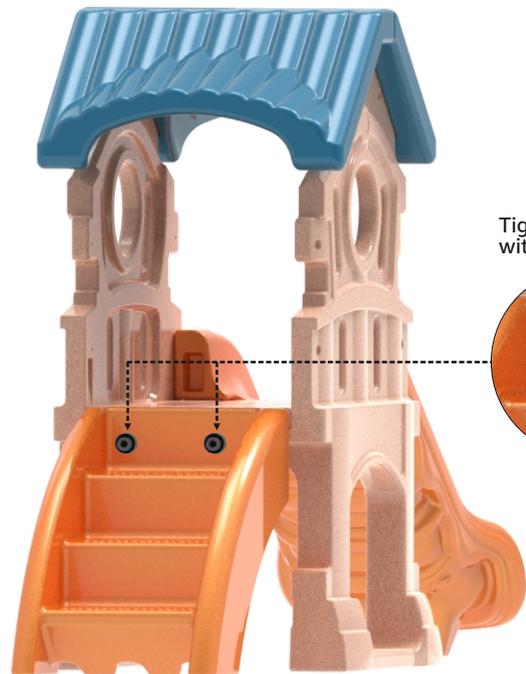

Tighten the bolts with the allen key



Put a nut cap each onto both the allen bolts.

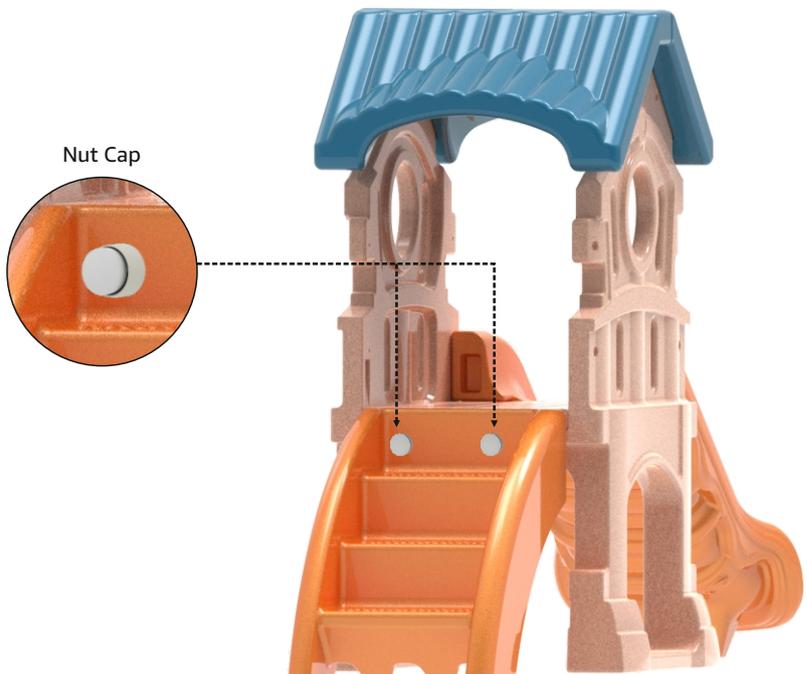

Nut Cap

4 STEP


Required Assembly Parts

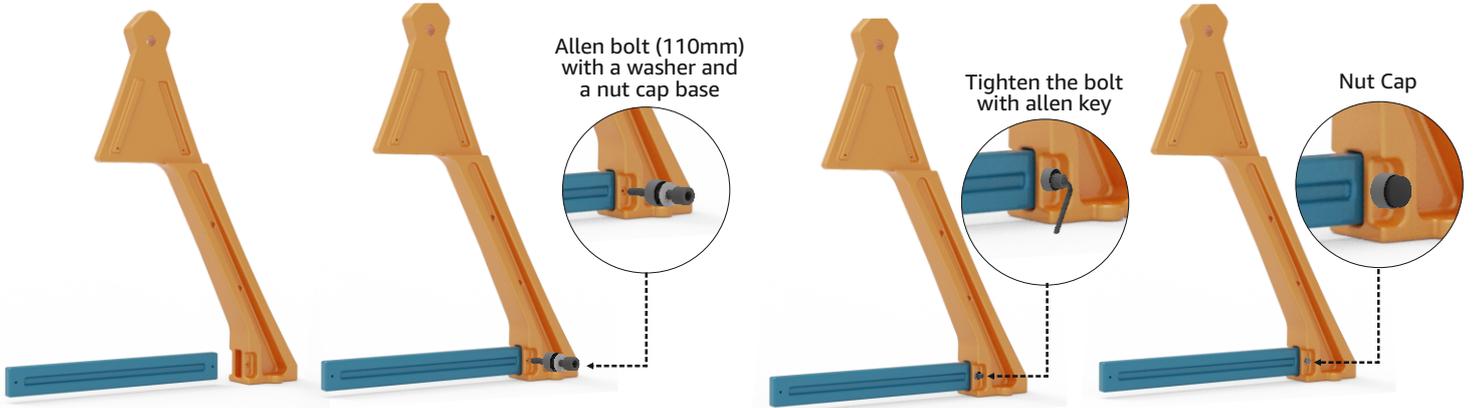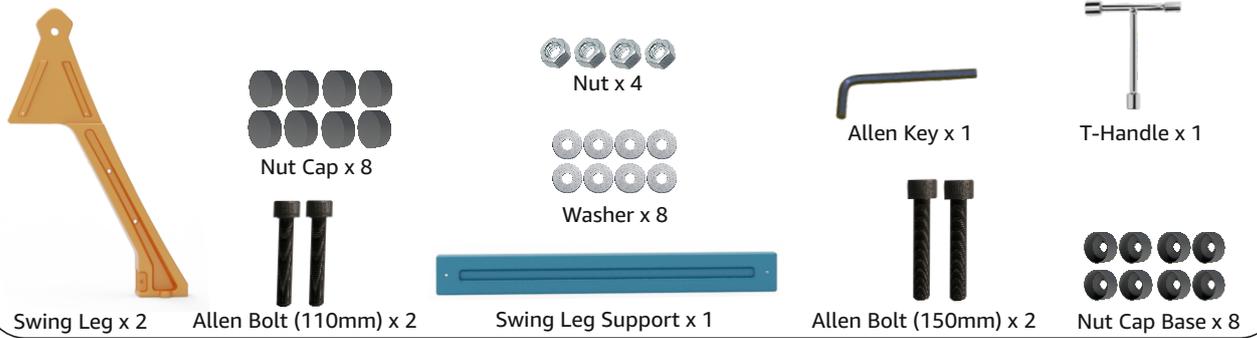

- Take a swing leg and the swing leg support. Slide one end of the swing leg support into the designated slot at the bottom of the swing leg as shown in the images above.
- Take one 110mm allen bolt, and put a washer and a nut cap base onto it.
- Insert the bolt (with washer and nut cap base) through the bottom aligned holes of the swing leg and the swing leg support as shown in the image above. The threaded end of the bolt protrudes from the other side.
- From the protruding end of the bolt, place a nut cap base first, then a washer followed by a nut.

- Tighten the allen bolt with the allen key.
Note: Use the T-handle to keep the nut stationary when you tighten the bolt.
- Fix a nut cap each onto the head and the threaded end of the bolt.**

Use the above mentioned steps to attach the other swing leg to the swing leg support.

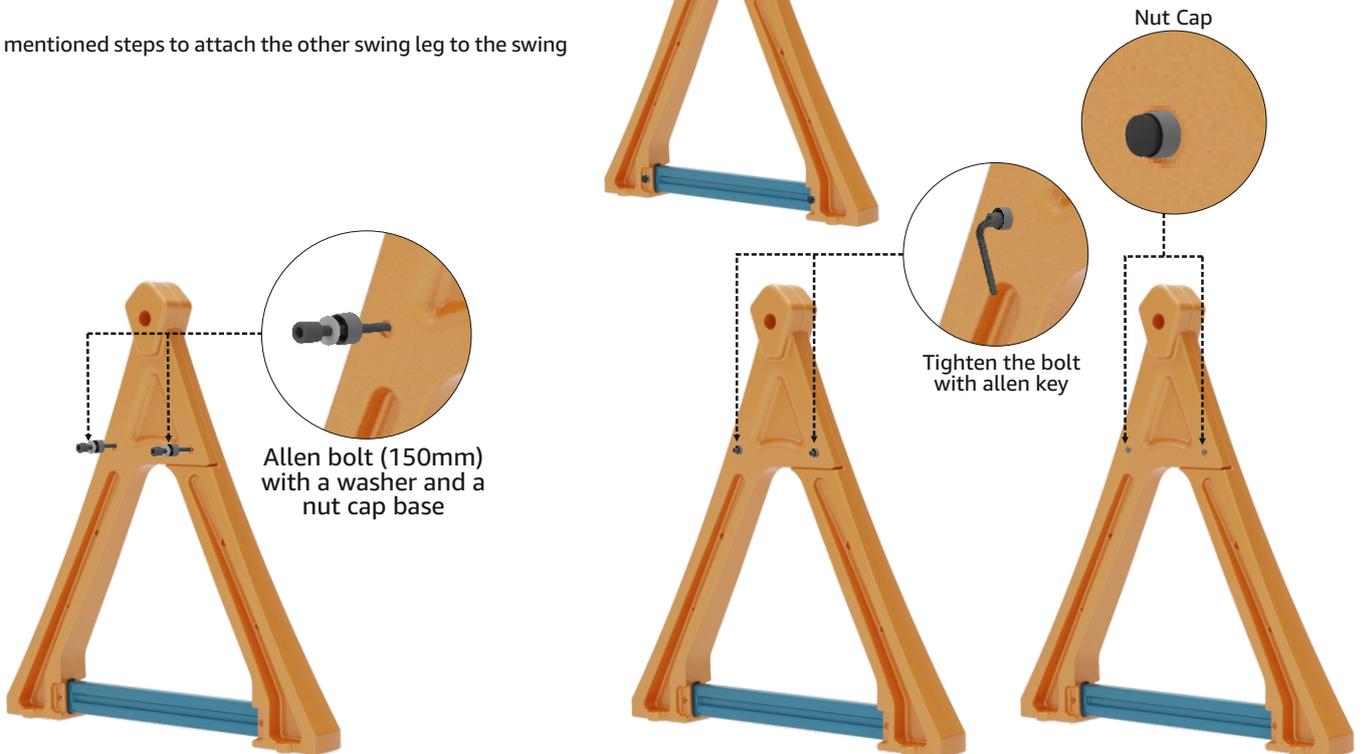


- Take two 150mm allen bolts, and put a washer first and then a nut cap base onto each bolt.
- Insert one bolt (with the washer and the nut cap base) each through the aligned holes of the swing legs as shown in the image above. The threaded end of the bolt protrudes from the other side.
- From the protruding end of each bolt, place a nut cap base first, then a washer followed by a nut.

- Tighten both the allen bolts one by one with the allen key.
Note: Use the T-handle to keep the nut stationary when you tighten the bolt.
- Fix a nut cap each onto the head and the threaded end of both the bolts.**

5 STEP

Required Assembly Parts

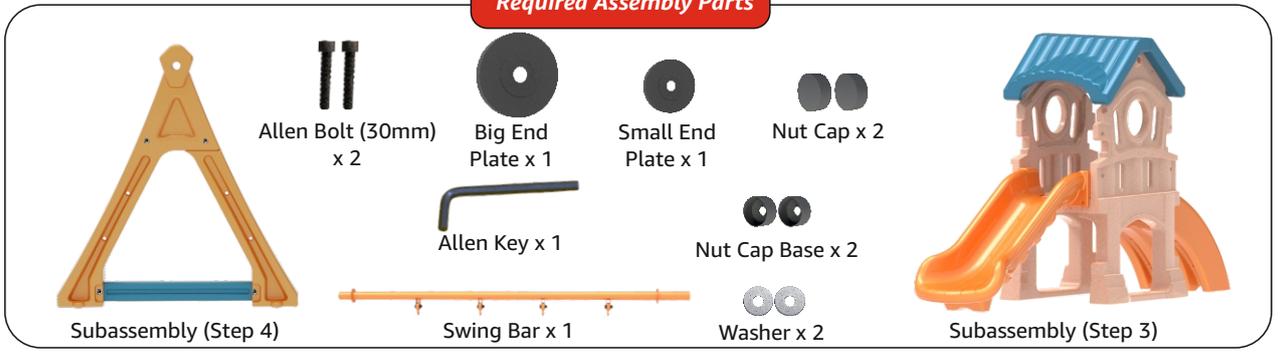

Take the swing bar and insert its end into the hole at the top of the subassembly (step 4). Slide the bar through until its stop ring comes into contact with the top portion of the swing legs.



Take one big end plate, align the hole at its centre with the hole at the end of the swing bar (on the swing leg side).







Take one 30mm allen bolt, put a washer and then a nut cap base onto it, and insert the bolt (with washer and nut cap base in place) into the aligned holes of the swing bar and the big end plate. Tighten the bolt with the allen key, securing one end of the swing bar to the swing legs.


Take one nut cap and press it firmly onto the bolt head until it is securely in place.




Slide the open end of the swing rod into the top hole (below roof) of the subassembly (step 3). The bar end will fit inside the hole and will be visible from inside the small castle subassembly.

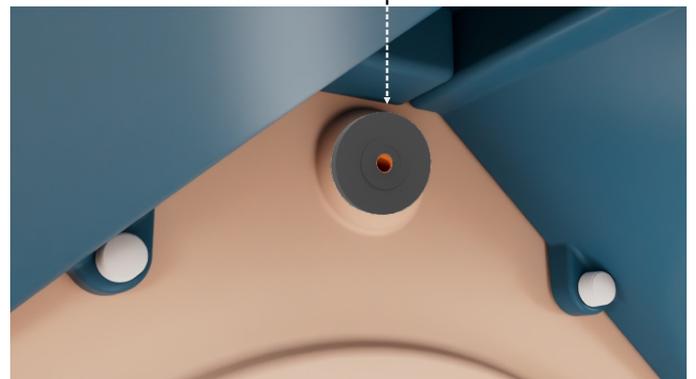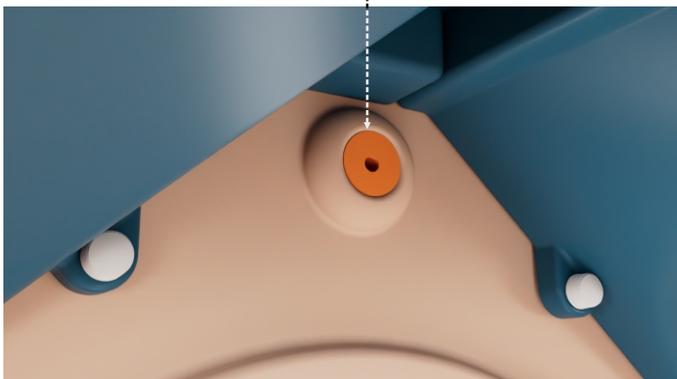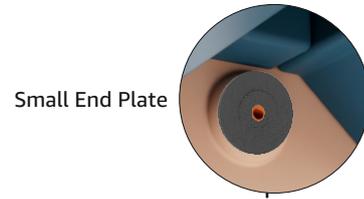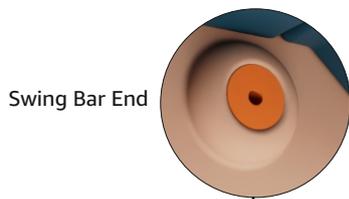


Take one end plate, align the hole at its centre with the hole at the end of the swing bar.

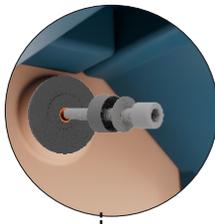


30mm Allen bolt with washer and nut cap base

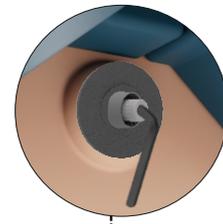


Tighten the bolt with allen key

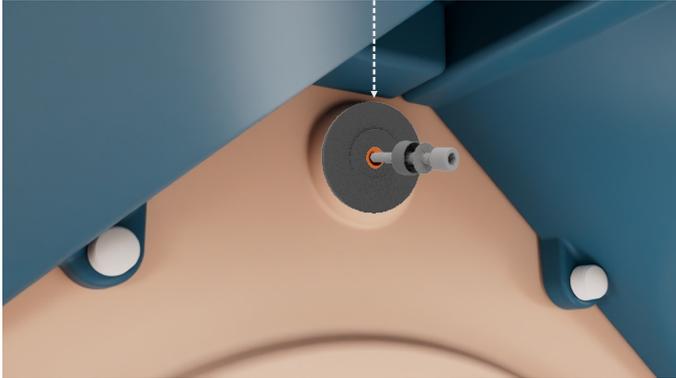


Take one 30mm allen bolt, put a washer and a nut cap base onto it. Insert the allen bolt into the aligned holes of the end plate and the stone bar.

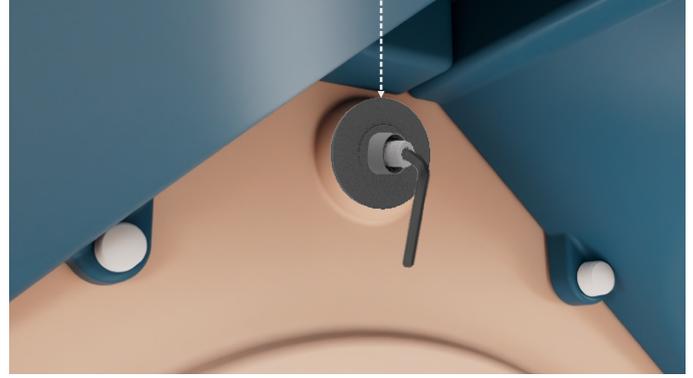

Tighten the bolt with the allen key.

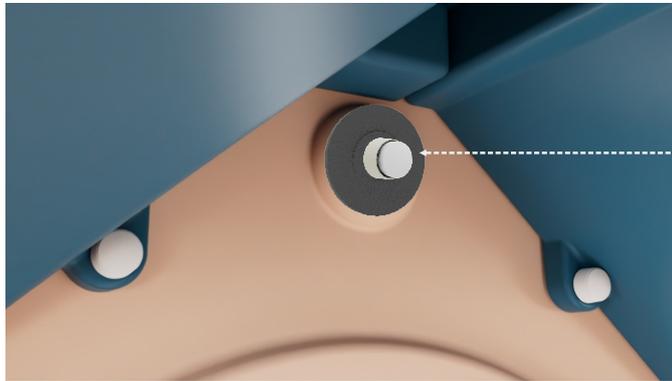

Fix a nut cap onto the bolt head.

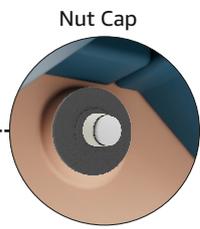

Nut Cap

6 STEP

Required Assembly Parts



Subassembly (Step 5) x 1

Bucket Swing x 1

Flap Swing x 1

The swing bar features two pairs of rings - one pair for securing the bucket swing and the other pair for the flap swing.

Take the flap swing and attach the snap hooks at the top of its two chains to one pair of rings on the swing rod, ensuring each snap hook is securely fastened to its corresponding ring. Next, secure the bucket swing chains to the other pair of rings.

Note: Inspect thoroughly to ensure all snap hooks are fully closed and both swings are securely fastened before use.





Your Classic PlayCASTLE is now ready for use.